




T-LIGHT PRO MENU MAP - MENU MODE=0 (STANDARD MENU)

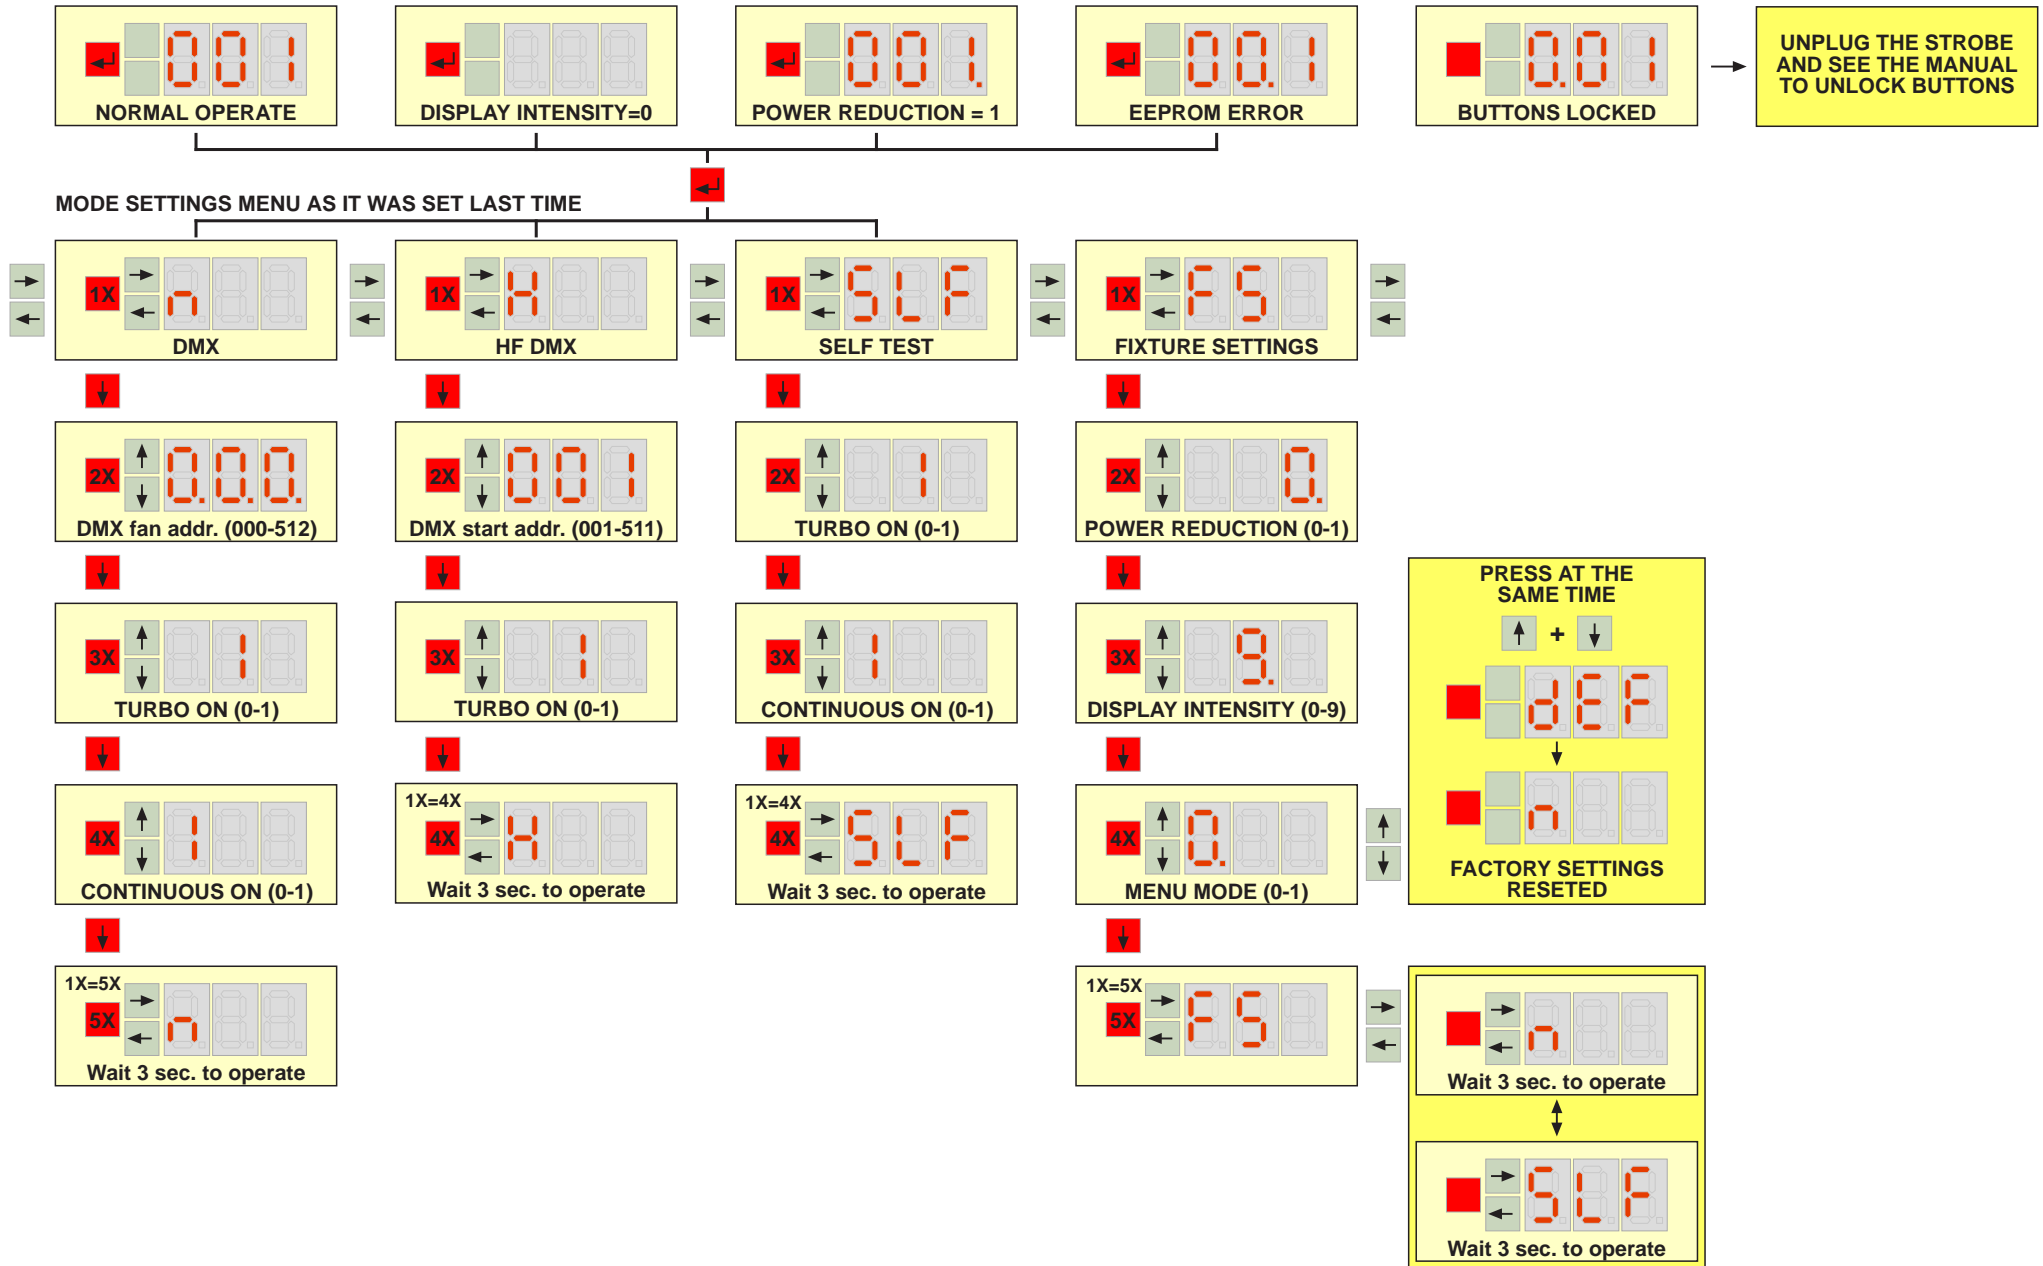

T-LIGHT PRO MENU MAP - MENU MODE=1 (EXTENDED MENU)

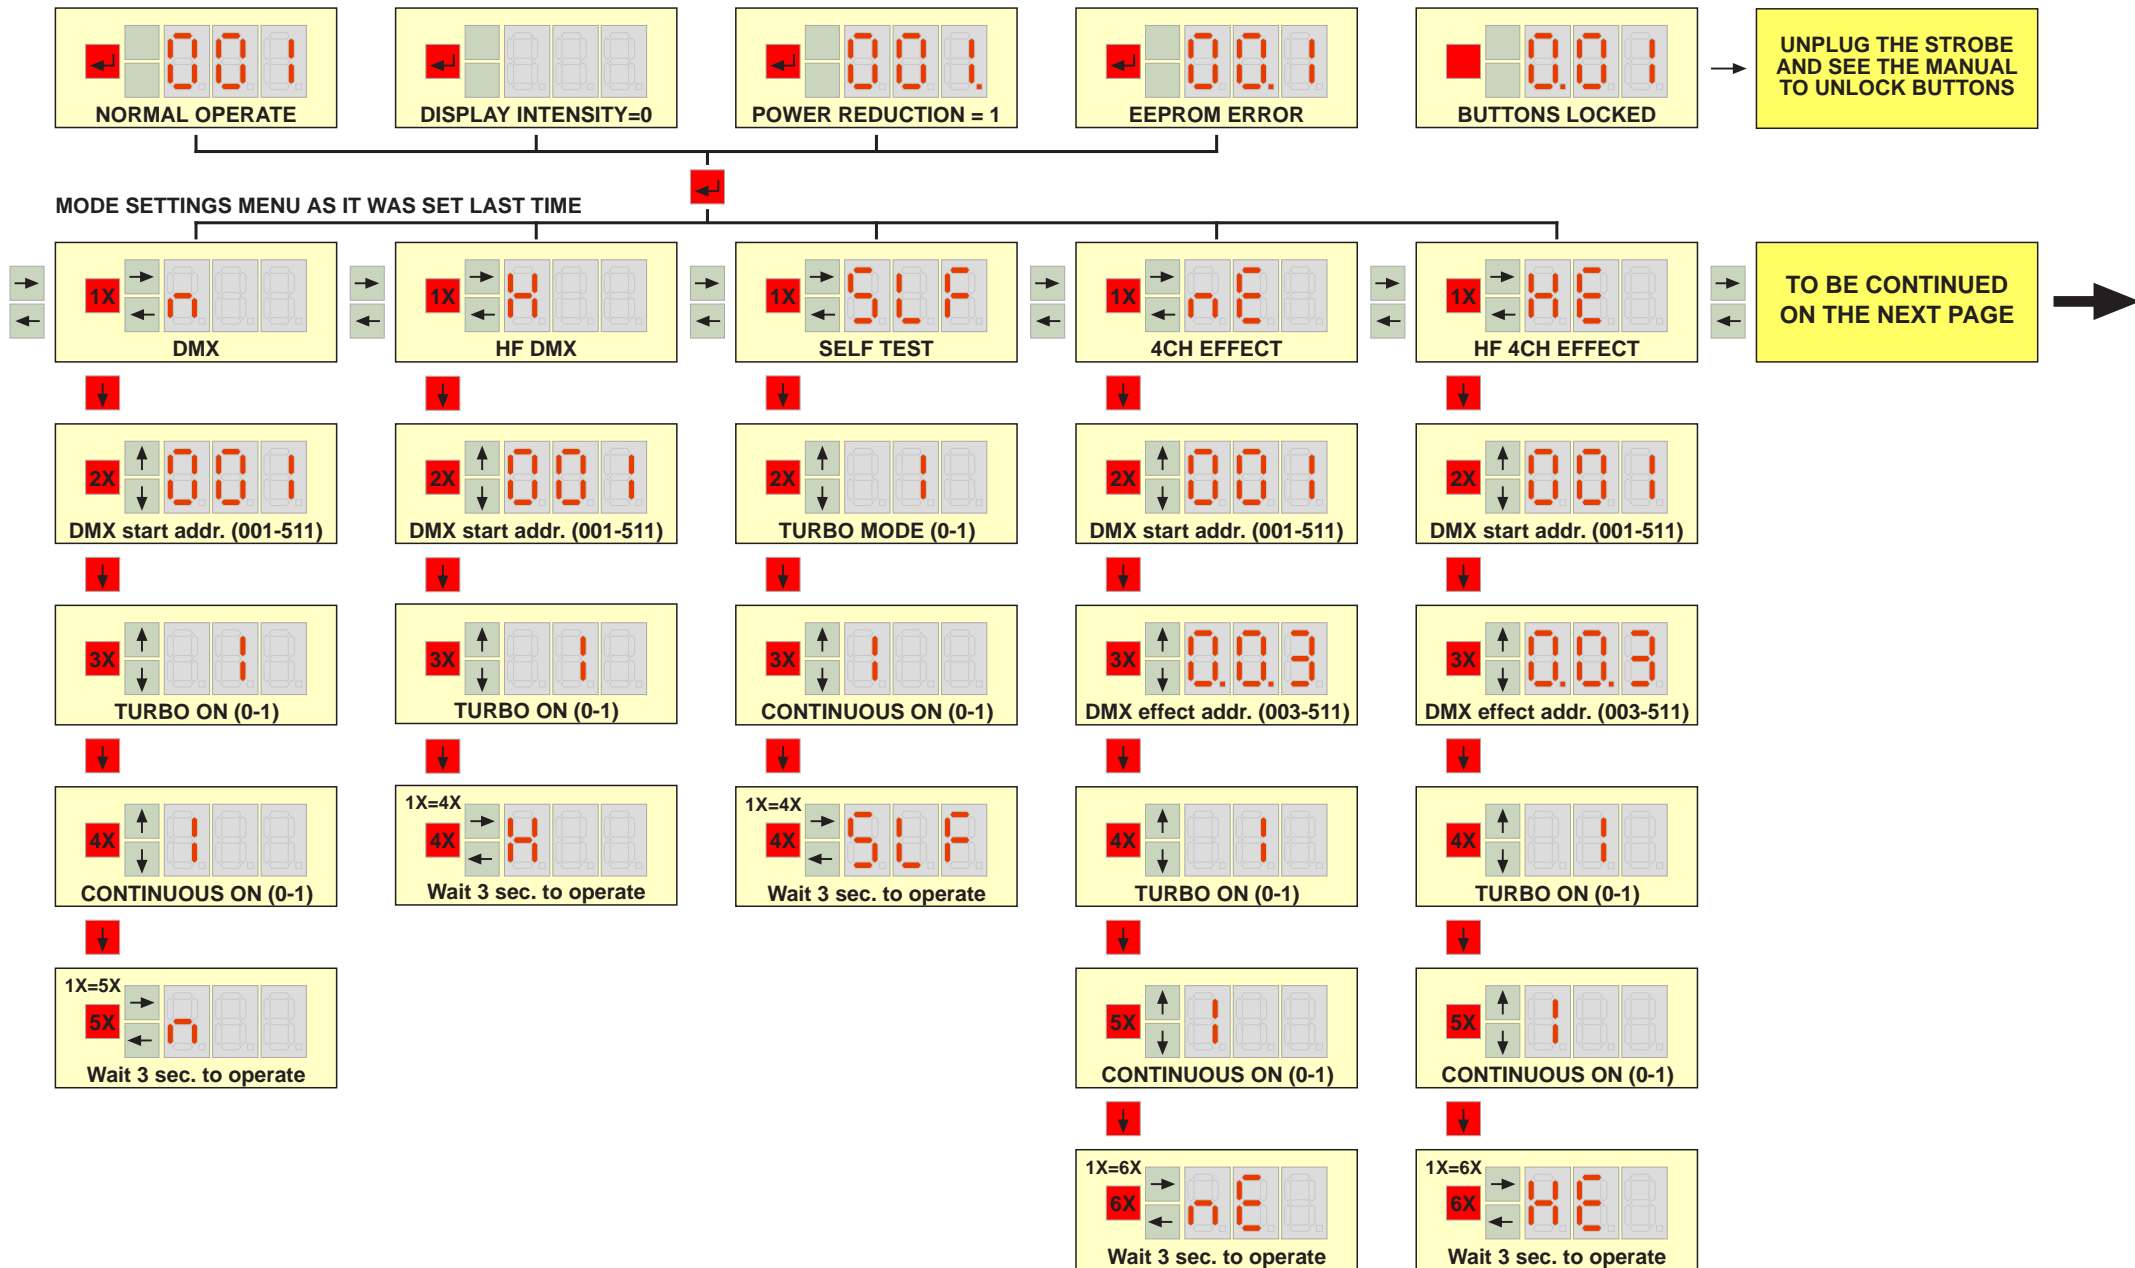

T-LIGHT PRO MENU MAP - MENU MODE=1 (EXTENDED MENU)

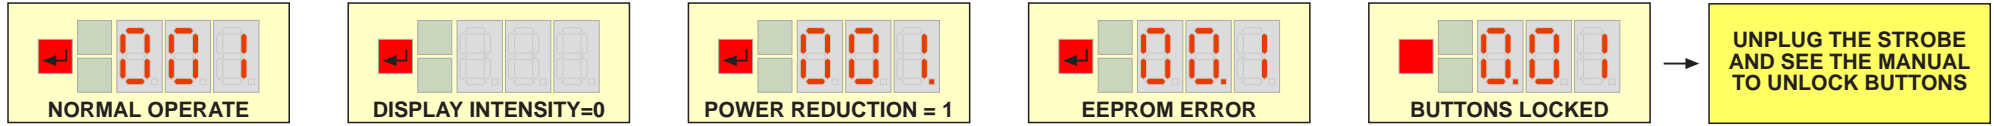

UNPLUG THE STROBE AND SEE THE MANUAL TO UNLOCK BUTTONS

TO BE CONTINUED FROM THE PREVIOUS PAGE

MODE SETTINGS MENU AS IT WAS SET LAST TIME

